


LV 1017L

Brass Bronze Spring Safety Relief Valve

Screwed BSPP Female, PTFE Seat, Test Lever, 1-5 Bar and 5-12 Bar Springs, Temperature -10°C to 180°C

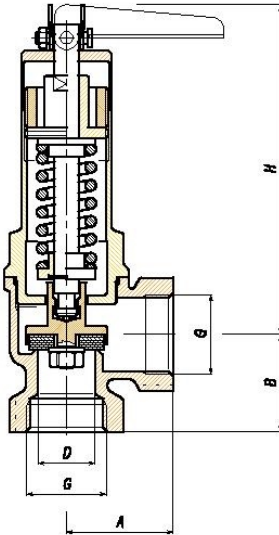

Dimensions				
G	H	B	A	D
1/2"	122	28	30	15
3/4"	148	32	36	19
1"	165	38	47	24.5
1 1/4"	185	44	57	31.5
1 1/2"	207	47	62	38
2"	230	54	72	48

Material List	
Part	Material
Body	Bronze
Seat	PTFE
Spring	Stainless Steel
Internals	Brass
Bonnet	Brass
Adjusting Screw	Brass
Spring Follower	Brass
Seat Holder	Brass
Cap	Brass
Lock Nut	Brass
Lever	Steel

Installation & Maintenance

The relief valve should be mounted with the body in the vertical position, this is to ensure that the valve reseats correctly.

Ensure that the pipe work is clear of system debris.

Periodically the valve lid and seat should be examined, if the contact faces are marked they should be refaced & lapped in.

If the soft seat is damaged it should be replaced. The spring should be examined for any deterioration, such as cracking, thinning of the coils or reduction in length.

The spring should be replaced if any defect is found.

All parts should move freely in their respective guides.

Valves should be re calibrated annually.

ONLY trained personal should set/calibrate the valve.

Please contact the sales office for re calibration.

Recommended for Air Application